QTL - Quartz Tungsten Long



Properties


The Ceramicx range of short wave linear quartz infrared heaters was designed for applications requiring a very fast thermal response and/or high power density with peak emission wavelengths in the 1.6-1.9 μm range. The standard halogen heater is available in 3 sizes – models QTL, QTM and QTS. All heaters use Ø10 quartz glass and are fitted with the industry standard R7s type termnation which, when used with a suitable R7s holder at both ends, is used to mount the heater and provide the electrical supply connection. Non-standard power outputs, voltage ratings, lengths and termination types available on request.




Please contact Ceramicx for further information or use our online enquiry form available at: https://www.ceramicx.com/information/support/tube-enquiry-form/

Technical specification

rechnical specii	เดินเอก	
Material	Quartz glass tube with tungsten filament	
Heater voltage	240 V (standard)	-
Overall length	473 mm	
Heater length	425 mm	-
Tube diameter	10 mm	
Weight	60 g	-
Average operating life	Up to 5 000 hrs depending on conditions	
Standards	CE	·
Termination	R7s	

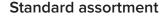

Model	Power	Max Coil	Overall	Heated
QTL	W	Temp °C	Length mm	Length mm
QTL 1500	1500	1270	473	415
QTL 1750	1750	1470	473	415
QTL 2000	2000	1500	473	415

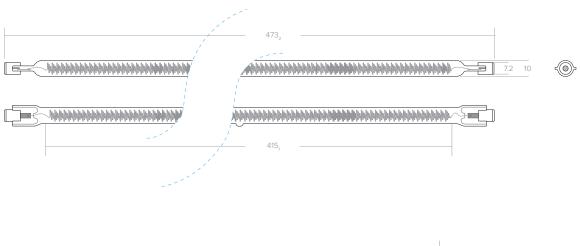





Installation, handling and Safety Information

- The body of the Halogen/tungsten heater is a sealed quartz glass tube. Like all glass products, these heaters should be handled with care. Excessive mechanical or physical force during handling or installation could break or damage the glass tube. Broken glass may be hazardous to personnel and also the heating process.
- Ensure the heater is not exposed to vibration during operation as this will also reduce the operating life of the heater.
- Gloves should be worn while handling the heater. Finger prints can affect the optical properties of the glass tube and may reduce the operating life of the heater. Clean any dirt, oil or lint from the heater with alcohol and a lint free cloth or tissue.
- Always turn the electrical power off before inserting, removing or cleaning the heater.
- Halogen/tungsten heaters are high intensity infrared heaters. Care should be taken to ensure that personnel cannot touch the heater during operation and that a safe distance from the heater is always maintained to ensure there is no risk of burning due to the radiant output of the heater.
- Halogen heaters can produce high intensity white light which could cause damage to human eyes. Care should
 be taken to ensure that personnel cannot look directly at the heaters during operation. If necessary, a filter to
 reduce the glare or protective glasses should be provided. In such cases, personnel should be warned of the
 danger using suitable signage.
- The temperature of the glass tube may exceed 600°C. As with all high temperature heat sources, care should be taken to ensure that the atmosphere within which the heater is operating is free of potentially explosive gases which could be ignited by contact with the glass tube. In all cases, the operator is responsible for ensuring that the heater is suitable for use in their specific application.
- Ensure the temperature of the glass tube does not exceed 800°C.
- Ensure heaters do not radiate directly on to nearby heaters as this will increase operating temperature and reduce operating life.
- The heater should be installed by a qualified person ensuring that all relevant electrical safety standards are adhered to.
- Ensure the heater is connected to an electrical supply corresponding to the rated voltage of the heater. Excessive voltage will reduce the operating life of the heater.
- The heater is designed for horizontal operation only unless clearly specified for vertical operation.
- The pinch seal section of the heater (the flattened glass section at the ends) should not be exposed to temperatures exceeding 350°C. Temperatures exceeding this value may cause gas leakage and therefore reduce the operating life of the heater.
- Halogen/tungsten heaters can take more than 10 times the normal operating current when operated from cold (normal room temperature). Ensure that fuses or other protective devices are correctly specified to handle this starting current.
- The heaters should only be used in approved fixtures designed for halogen/tungsten heaters.
- Ensure the heaters are operated at a safe distance from combustible materials.